

9. Fuel Filter

A: REPLACEMENT

For fuel filter replacement procedures, refer to “FU” section.

<Ref. to FU(H4SO)-62, Fuel Filter.>

B: INSPECTION

- 1) If fuel filter is clogged, or if replacement interval has been reached, replace it.
- 2) If water is found in it, shake and expel the water from inlet port.