

FUEL SUB LEVEL SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

9. Fuel Sub Level Sensor

A: REMOVAL

For removal procedure, refer to “FU(H4DOTC)” section. <Ref. to FU(H4DOTC)-58, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For installation procedure, refer to “FU(H4DOTC)” section. <Ref. to FU(H4DOTC)-59, INSTALLATION, Fuel Sub Level Sensor.>