


FUEL TEMPERATURE SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

8. Fuel Temperature Sensor

A: REMOVAL


The fuel temperature sensor and fuel level sensor are integrated into one unit. Therefore, the removal procedure is same as that described under fuel level sensor. <Ref. to FU(H4DOTC)-57, REMOVAL, Fuel Level Sensor.>

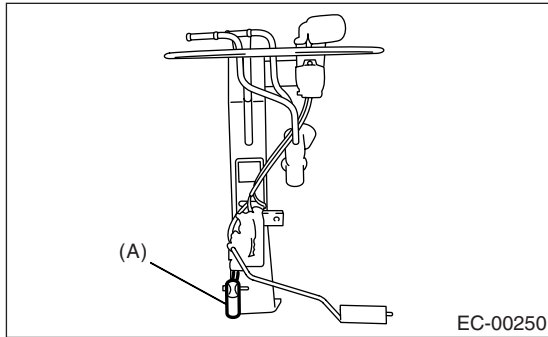

(A) Fuel temperature sensor

B: INSTALLATION

The fuel temperature sensor and fuel level sensor are integrated into one unit. Therefore, the installation procedure is same as that described under fuel level sensor. <Ref. to FU(H4DOTC)-57, INSTALLATION, Fuel Level Sensor.>

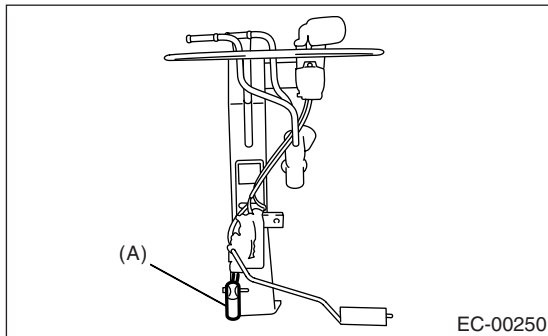

(A) Fuel temperature sensor