

# FUEL PUMP RELAY


FUEL INJECTION (FUEL SYSTEMS)

---

## 19. Fuel Pump Relay

### A: REMOVAL


1) Disconnect the ground cable from battery.

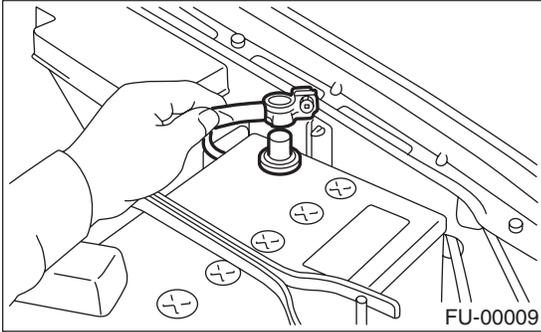

2) Remove the glove box. <Ref. to EI-34, REMOVAL, Glove Box.>

3) Remove the bolt which holds fuel pump relay bracket on the body.

4) Disconnect the connector from the fuel pump relay.

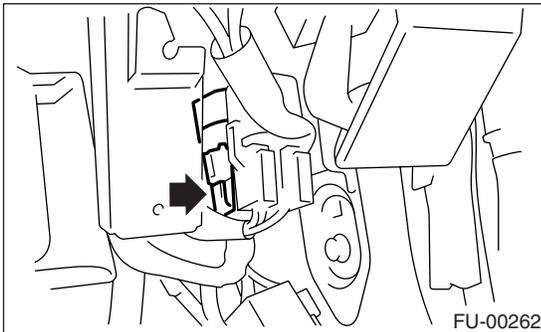

5) Remove the fuel pump relay from the mounting bracket.

### B: INSTALLATION

Install in the reverse order of removal.