



18.Main Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.

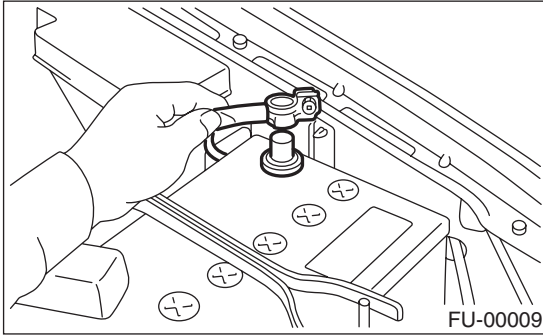

- 2) Remove the glove box. <Ref. to EI-34, REMOVAL, Glove Box.>
- 3) Remove the bolt which holds the main relay bracket on the body.
- 4) Disconnect the connectors from the main relay.

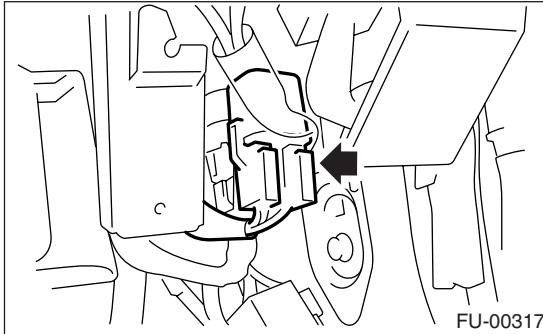

B: INSTALLATION

Install in the reverse order of removal.