

3. Ignition Coil & Ignitor ASSY

A: REMOVAL

Direct ignition type has been adopted.
Refer to the "Spark Plug Removal" for removal procedure. <Ref. to IG(H4DOTC)-5, REMOVAL, Spark Plug.>

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf-m, 11.7 ft-lb)

C: INSPECTION

For inspection, refer to the following. <Ref. to EN(H4DOTC)-62, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>