

## 24.Crankshaft

### A: REMOVAL AND INSTALLATION

For operations related to crankshaft, refer to “20. Cylinder Block.” <Ref. to ME(H4DOTC)-74, REMOVAL, Cylinder Block.> <Ref. to ME(H4DOTC)-78, INSTALLATION, Cylinder Block.>