


## 10. Reservoir Tank

### A: REMOVAL

- 1) Disconnect the overflow hose from radiator filler neck position.
- 2) Remove the bolts which install reservoir tank onto radiator main fan shroud.
- 3) Remove the reservoir tank.

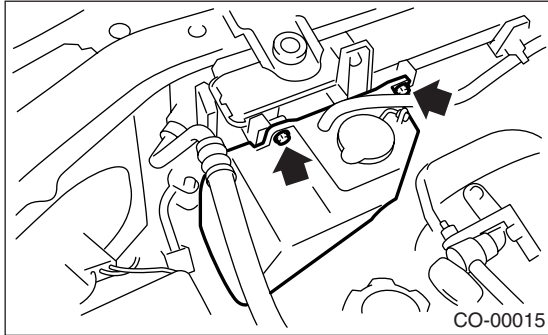

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

For the tightening torque, refer to "COMPONENT".  
<Ref. to CO(H4SO)-3, COMPONENT, General Description.>

### C: INSPECTION

Make sure the engine coolant level is between full and low.


## 11. Coolant Filler Tank

### A: REMOVAL


**WARNING:**

The radiator is pressurized. Wait until the engine cools down before working on the radiator.

- 1) Drain the coolant about 3.0 ℓ (3.2 US qt, 2.6 Imp qt). <Ref. to CO(H4SO)-17, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 2) Remove the air cleaner upper cover and air intake boot. <Ref. to IN(H4DOTC)-7, REMOVAL, Air Cleaner.>
- 3) Remove the air cleaner element.
- 4) Disconnect the engine coolant hoses from coolant filler tank.

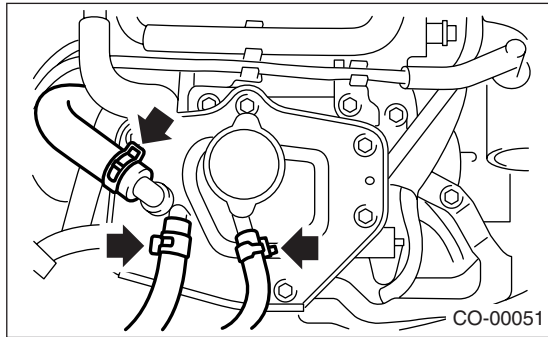

- 5) Remove the bolts and nut which install coolant filler tank.
- 6) Disconnect the engine coolant hose which connects under side of coolant filler tank.
- 7) Remove the coolant filler tank.

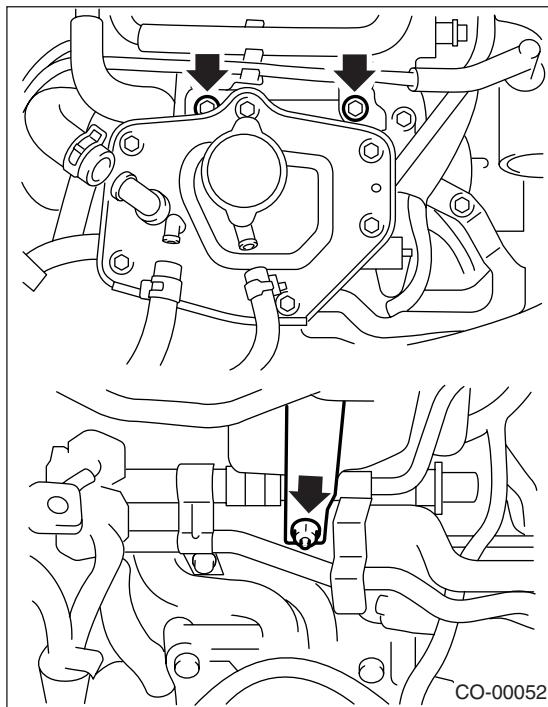


### B: INSTALLATION

- 1) Install in the reverse order of removal.

**Tightening torque:**

**T1: 19 N·m (1.9 kgf-m, 13.7 ft-lb)**

**T2: 21 N·m (2.1 kgf-m, 15.2 ft-lb)**

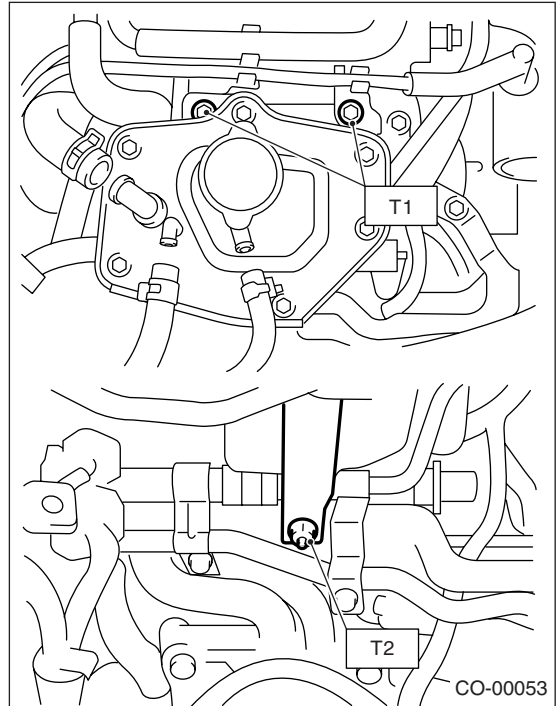

- 2) Fill engine coolant. <Ref. to CO(H4SO)-17, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>