

EGR VALVE

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

4. EGR Valve

A: PROCEDURE

For EGR valve removal and installation procedures, refer to FU section. <Ref. to FU(H4SO)-34, EGR Valve.>