


# FRONT CATALYTIC CONVERTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

## 2. Front Catalytic Converter

### A: REMOVAL


The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the removal procedures are the same as those for the center exhaust pipe. <Ref. to EX(H4SO)-7, REMOVAL, Center Exhaust Pipe.>

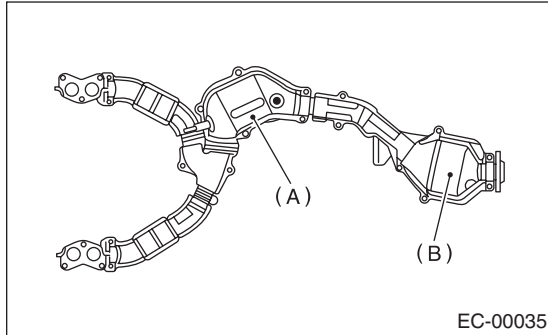

- (A) Front catalytic converter
- (B) Rear catalytic converter

### B: INSTALLATION

The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the installation procedures are the same as those for the center exhaust pipe. <Ref. to EX(H4SO)-7, INSTALLATION, Center Exhaust Pipe.>

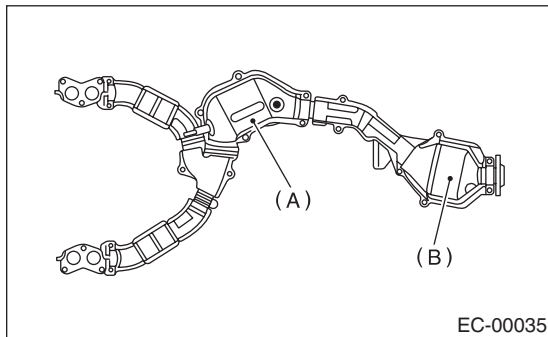

- (A) Front catalytic converter
- (B) Rear catalytic converter

### C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.