


PURGE CONTROL SOLENOID VALVE

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

6. Purge Control Solenoid Valve

A: REMOVAL


1) Disconnect the ground cable from battery.

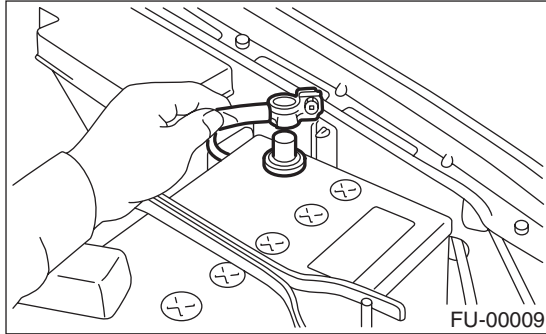


2) Remove the bolt which installs purge control solenoid valve onto intake manifold.

NOTE:

Take out purge control solenoid valve through the bottom of the intake manifold.

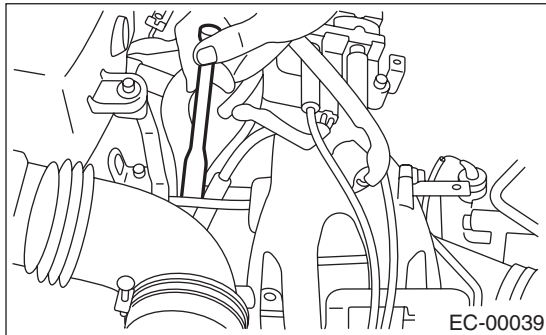

3) Disconnect the connector and hoses from purge control solenoid valve.

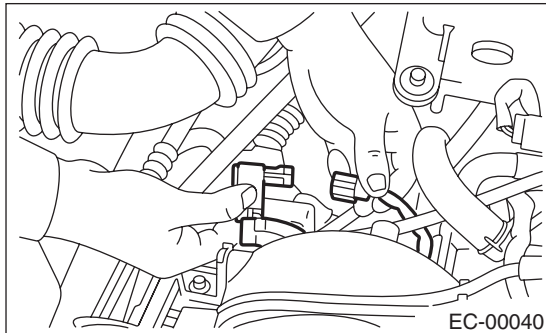


B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)

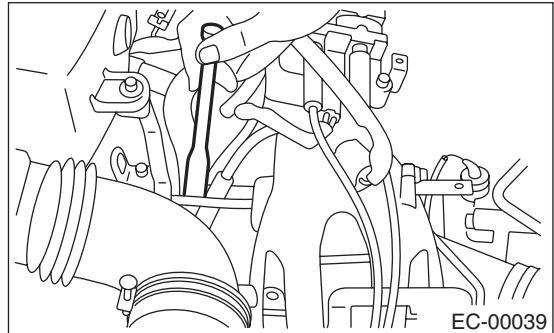

CAUTION:

Carefully connect the evaporation hoses.

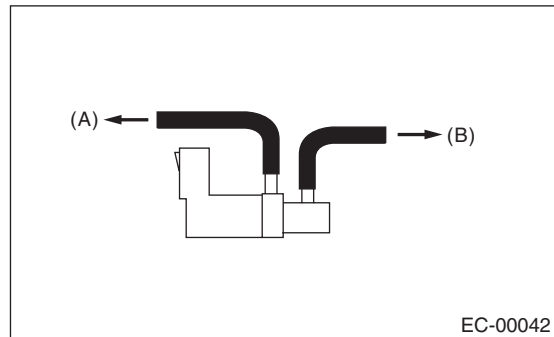

(A) To fuel pipe

(B) To intake manifold

C: INSPECTION

Make sure the hoses are not cracked or loose.