

REAR CATALYTIC CONVERTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

3. Rear Catalytic Converter

A: REMOVAL

The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the removal procedures are the same as those for the front catalytic converter. <Ref. to EC(H4SO)-3, REMOVAL, Front Catalytic Converter.>

B: INSTALLATION

The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the installation procedures are the same as those for the front catalytic converter. <Ref. to EC(H4SO)-3, INSTALLATION, Front Catalytic Converter.>

C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.