


FUEL DAMPER VALVE

FUEL INJECTION (FUEL SYSTEMS)

28. Fuel Damper Valve

A: REMOVAL

- 1) Release the fuel pressure. <Ref. to FU(H4SO)-49, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 2) Remove the fuel damper valve from the fuel return line.

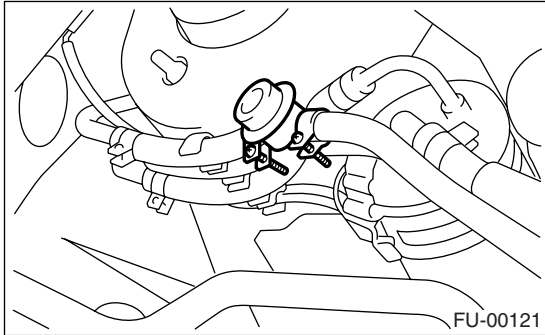

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1.25 N·m (0.13 kgf-m, 0.94 ft-lb)