


INTAKE AIR TEMPERATURE SENSOR

FUEL INJECTION (FUEL SYSTEMS)

10. Intake Air Temperature Sensor


A: REMOVAL

1) Disconnect the ground cable from battery.

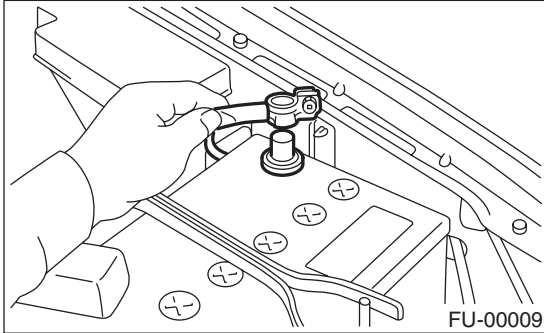

2) Disconnect the connector from the intake air temperature sensor.

3) Remove the intake air temperature sensor from air cleaner case.

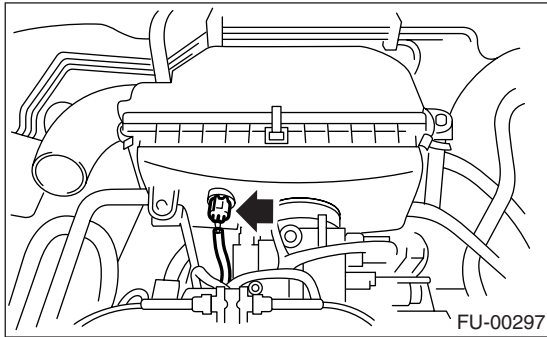

B: INSTALLATION

Install in the reverse order of removal.