


26.ATF Charger Pipe

A: REMOVAL

- 1) Remove the air cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-6, REMOVAL, Air Cleaner Case.>
- 2) Remove intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-10, REMOVAL, Intercooler.>
- 3) Remove the ATF charger pipe, and remove the O-ring from the flange face.

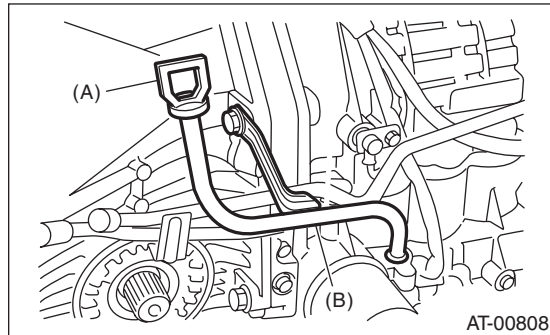


- (A) ATF level gauge
- (B) ATF charger pipe

B: INSTALLATION

- 1) Install the ATF charger pipe with new O-ring.

Tightening torque:

41 N·m (4.2 kgf-m, 30.4 ft-lb)

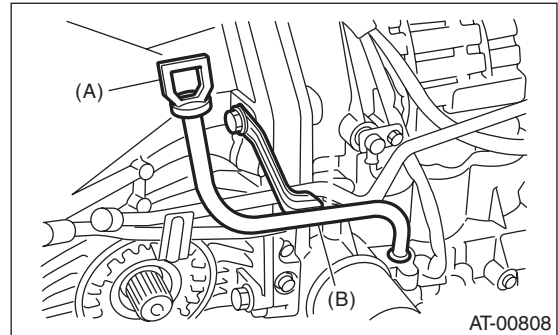

- (A) ATF level gauge
- (B) ATF charger pipe

- 2) Install the air cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-6, INSTALLATION, Air Cleaner Case.>
- 3) Install intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

C: INSPECTION

Make sure the ATF charger pipe is not deformed or otherwise damaged.