

REAR VEHICLE SPEED SENSOR

AUTOMATIC TRANSMISSION

15. Rear Vehicle Speed Sensor


A: REMOVAL

1. NON-TURBO MODEL

When removing the rear vehicle speed sensor, refer to "Front Vehicle Speed Sensor." <Ref. to 4AT-53, REMOVAL, Front Vehicle Speed Sensor.>


2. TURBO MODEL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.
- 3) Lift-up the vehicle.
- 4) Disconnect the rear vehicle speed sensor connector.

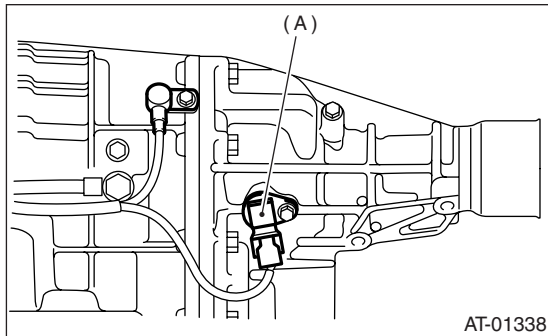

(A) Rear vehicle speed sensor

- 5) Remove the rear vehicle speed sensor.

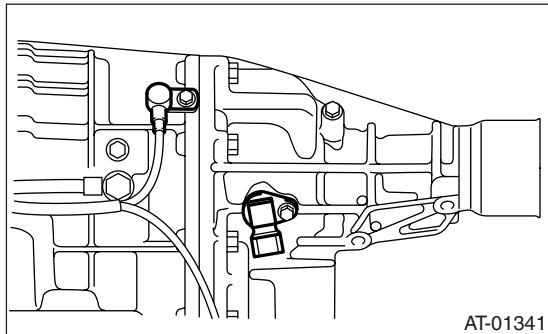

B: INSTALLATION

1. NON-TURBO MODEL

When installing the rear vehicle speed sensor, refer to "Front Vehicle Speed Sensor." <Ref. to 4AT-55, INSTALLATION, Front Vehicle Speed Sensor.>

2. TURBO MODEL

Install in the reverse order of removal.

NOTE:

Replace the O-ring with a new one.

Tightening torque:

7 N·m (0.7 kgf-m, 5.1 ft-lb)