


TRANSMISSION CONTROL MODULE (TCM)

AUTOMATIC TRANSMISSION


22. Transmission Control Module (TCM)

A: REMOVAL


- 1) Disconnect the ground cable from battery.

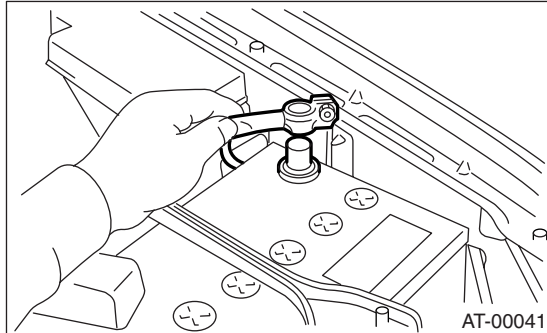

- 2) Remove the lower cover and then disconnect the connector.
- 3) Remove the knee bolster.

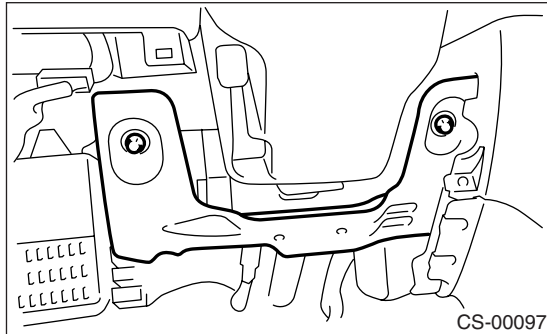


- 4) Disconnect the connectors from transmission control module.

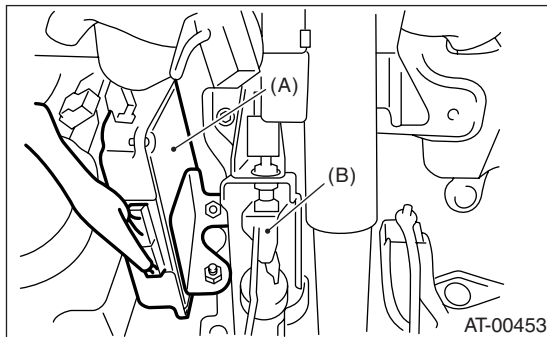

- (A) Transmission control module
- (B) Brake pedal

- 5) Remove the transmission control module.

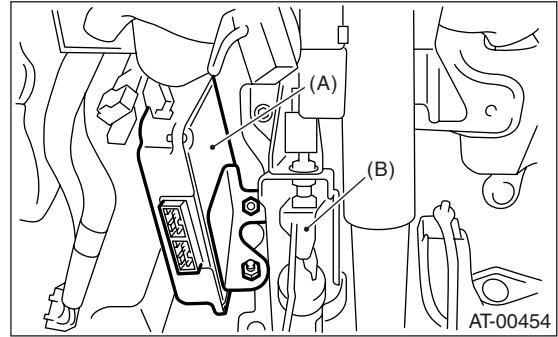


- (A) Transmission control module
- (B) Brake pedal

B: INSTALLATION

- 1) Install the transmission control module.

Tightening torque:

7.5 N·m (0.75 kgf·m, 5.5 ft·lb)

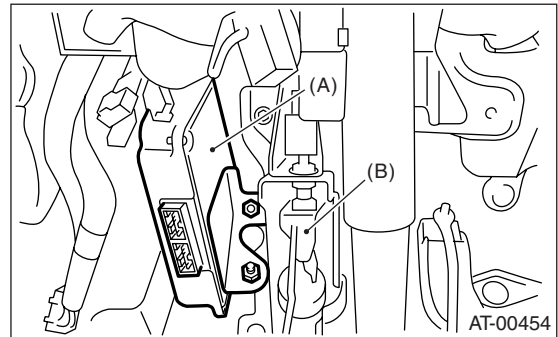

- (A) Transmission control module
- (B) Brake pedal

- 2) Connect the connectors to transmission control module.
- 3) Install in the reverse order of removal.