

## 7. Rear Tone Wheel

### A: REMOVAL

Refer to Rear Axle, because the rear tone wheel is installed to rear hub.

<Ref. to -25, REMOVAL, Rear Axle.>

### B: INSTALLATION

Refer to Rear Axle, because the rear tone wheel is installed to rear hub.

<Ref. to -28, INSTALLATION, Rear Axle.>

### C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace the tone wheel with a new one.