
5. Rear Differential Front Oil Seal

A: REPLACEMENT

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.
- 3) Move the select lever or gear shift lever to "N".
- 4) Release the parking brake.
- 5) Remove the oil drain plug, and drain the gear oil.

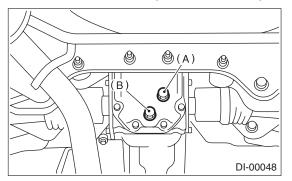

- (A) Filler plug
- (B) Drain plug

6) Install the oil drain plug.

NOTE:

Apply liquid gasket to the drain plug.

Liquid gasket:

Part No. 004403010 THREE BOND 1105 or equivalent

Tightening torque: 49 N⋅m (5.0 kgf-m, 36.2 ft-lb)

7) Jack-up the rear wheels and support the vehicle body with sturdy racks.

8) Remove the rear exhaust pipe and muffler. Non-turbo model

<Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-9, REMOVAL, Muffler.>


Turbo model

<Ref. to EX(H4DOTC)-13, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, RE-MOVAL, Muffler.>


9) Remove the propeller shaft from body. <Ref. to DS-15, REMOVAL, Propeller Shaft.>

10) Remove the self-locking nut while holding the companion flange with ST.


ST 498427200 FLANGE WRENCH

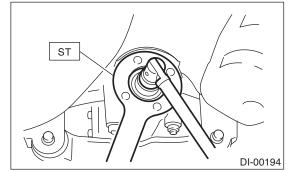

11) Extract the companion flange using ST. ST 399703600 PULLER ASSY

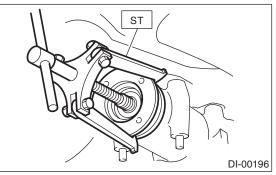


12) Remove the oil seal using ST. ST 398527700 PULLER ASSY

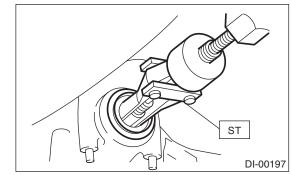

13) Fit a new oil seal using ST.

NOTE:

Apply oil to the outer surface of oil seal. ST 498447120 INSTALLER

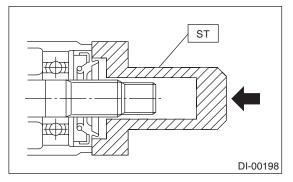

14) Install the companion flange.

NOTE:

Use a plastic hammer to install the companion flange.


15) Tighten the self-locking nut within the specified torque range so that the turning resistance of companion flange becomes the same as that before replacing oil seal.

ST 498427200 FLANGE WRENCH

NOTE:

Use a new self-locking nut.

Tightening torque: 181 N⋅m (18.5 kgf-m, 134 ft-lb)

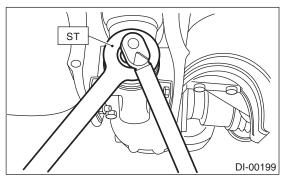

16) Hereafter, reassemble in the reverse order of disassembly.

17) After installation, fill the differential carrier with gear oil to the filler plug level. <Ref. to DI-16, Differential Gear Oil.>