

### 4. Aluminum Wheel

#### A: REMOVAL

Refer to Steel Wheel for removal procedure of aluminum wheels. <Ref. to WT-5, REMOVAL, Steel Wheel.>

#### B: INSTALLATION

Refer to Steel Wheel for installation procedure of aluminum wheels. <Ref. to WT-5, INSTALLATION, Steel Wheel.>

#### C: INSPECTION

Refer to Steel Wheel for inspection procedure of aluminum wheels. <Ref. to WT-5, INSPECTION, Steel Wheel.>

#### *Rim runout:*

Axial runout limit	Radial runout limit
1.0 mm (0.039 in)	

#### D: CAUTION

Aluminum wheels are easily scratched. To maintain their appearance and safety, do the following:

- 1) Do not damage the aluminum wheels during removal, installation, wheel balancing, etc. After removing the aluminum wheels, place them on a rubber mat, etc.
- 2) While the vehicle is being driven, be careful not to ride over sharp obstacles or allow the aluminum wheels to contact the shoulder of the road.
- 3) When installing a tire chain, be sure to install it properly not to have slack; otherwise it may hit the wheel while driving.
- 4) When washing the aluminum wheel, use neutral synthetic detergent and water. Avoid using the cleanser including abrasive, hard brushes or an automatic car washer.