

BASIC DIAGNOSTIC PROCEDURE

AIRBAG SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	CHECK AIRBAG WARNING LIGHT. Turn the ignition switch to OFF.	Does airbag warning light illuminate?	Go to step 2.	Replace the airbag warning light. <Ref. to AB-29, Airbag Warning Light Failure.>
2	READ DTC. <Ref. to AB-26, Read Diagnostic Trouble Code (DTC).>	Is the normal code being detected?	Finish the diagnosis.	Go to step 3.
3	PERFORM THE DIAGNOSIS. 1) Judge the possible cause from "List of Diagnostic Trouble Code (DTC)". <Ref. to AB-34, List of Diagnostic Trouble Code (DTC).> 2) Inspect using "Diagnostic Procedure with Diagnostic Trouble Code (DTC)". 3) Repair the cause of the trouble. 4) Perform the clear memory mode. <Ref. to AB-28, Clear Memory Mode.> 5) Perform the inspection mode. <Ref. to AB-27, Inspection Mode.> 6) Read any DTC again.	Is the DTC being detected?	Perform the procedure 1) to 5) in step 3.	Finish the diagnosis.