

AIR VENT GRILLE


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

21. Air Vent Grille

A: REMOVAL


1. CENTER GRILLE

- 1) Disconnect the ground cable from battery.
- 2) Remove the center console panel. <Ref. to EI-37, REMOVAL, Instrument Panel Assembly.>
- 3) Loosen the two screws to remove the center air vent grille.

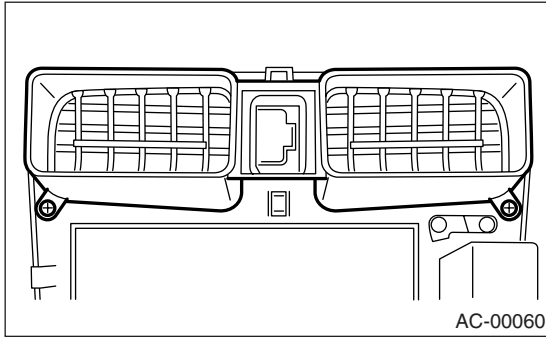

2. SIDE GRILLE

- 1) Remove the side vent grille by prying four points.

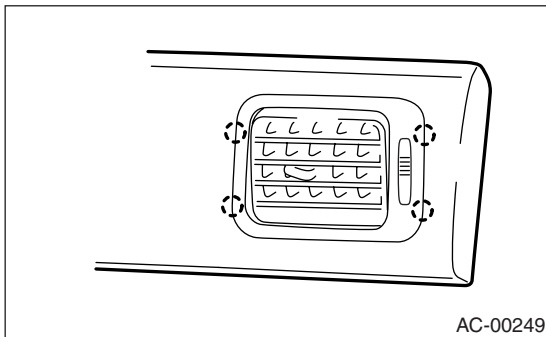

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

The direction and amount of air should be adjusted smoothly.

The adjustment should be kept in each position.