


4. Engine Oil Filter

A: REPLACEMENT


- 1) Remove the under cover.
- 2) Remove the oil filter with ST.

ST 498547000 OIL FILTER WRENCH

- NON-TURBO MODEL

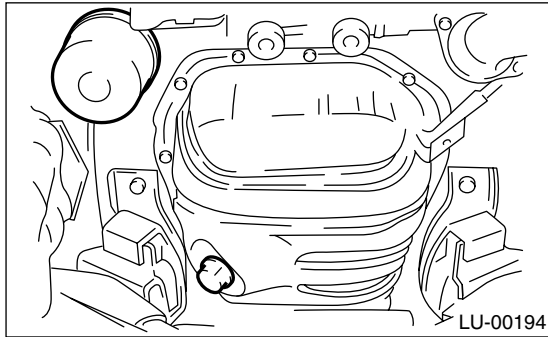

- TURBO MODEL

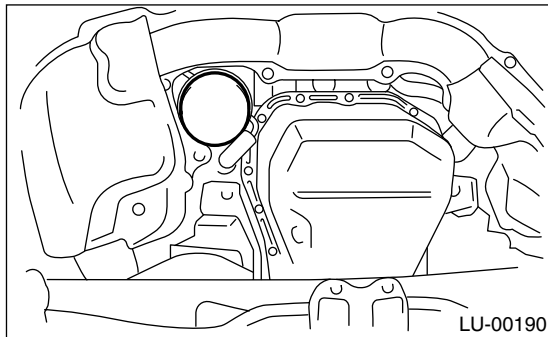

- 3) Get a new oil filter and apply a thin coat of engine oil to the seal rubber.
- 4) Install the oil filter by turning it by hand, being careful not to damage the seal rubber.
- 5) Tighten more (approx. 2/3 to 3/4 turn) after the seal rubber contacts the cylinder block. Do not tighten excessively, or oil may leak.
- 6) After installing the oil filter, run the engine and make sure that no oil is leaking around seal rubber.

NOTE:

The filter element and filter case are permanently joined; therefore, interior cleaning is not necessary.

- 7) Check the engine oil level. <Ref. to PM-6, INSPECTION, Engine Oil.>