


# CAMSHAFT POSITION SENSOR

FUEL INJECTION (FUEL SYSTEMS)

## 6. Camshaft Position Sensor


### A: REMOVAL

1) Disconnect the ground cable from battery.

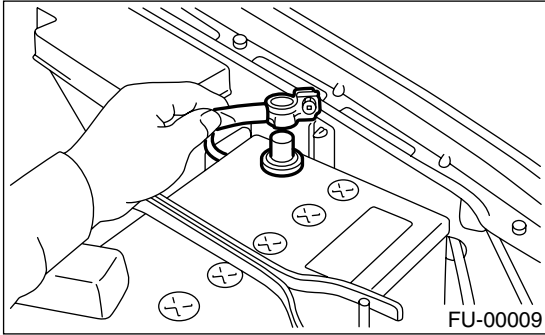

2) Disconnect the connector from the camshaft position sensor RH.

3) Remove the camshaft position sensor RH from the backside of cylinder head.

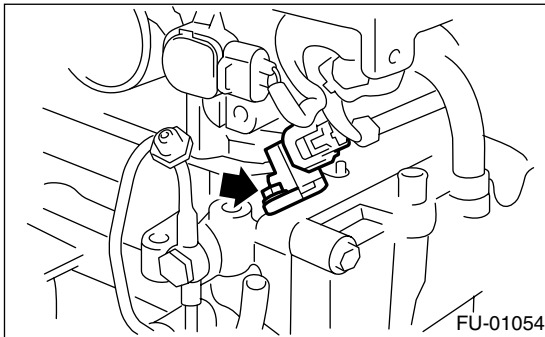

4) Remove the camshaft position sensor LH same as RH side.

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**T: 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)**

