

FUEL DAMPER VALVE


FUEL INJECTION (FUEL SYSTEMS)

28. Fuel Damper Valve

A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(STi)-45, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>

2) Remove the fuel damper valve from the fuel delivery line (A) and fuel return line (B).

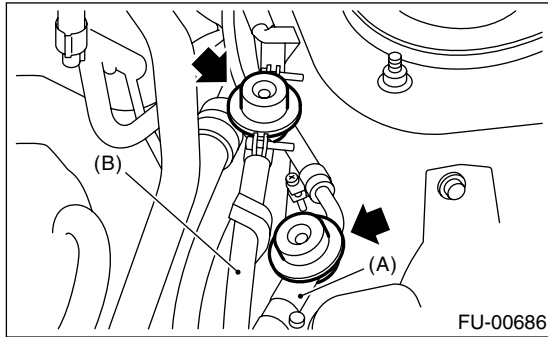

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1.25 N·m (0.13 kgf·m, 0.94 ft·lb)