

FUEL TEMPERATURE SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


7. Fuel Temperature Sensor

A: REMOVAL


WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel.

- 1) Remove the fuel pump assembly. <Ref. to FU(STi)-54, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from fuel pump bracket.

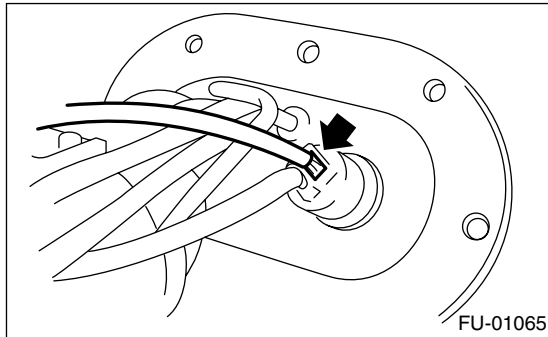

- 3) Remove the main fuel level sensor from fuel pump assembly. <Ref. to FU(STi)-57, REMOVAL, Fuel Level Sensor.>

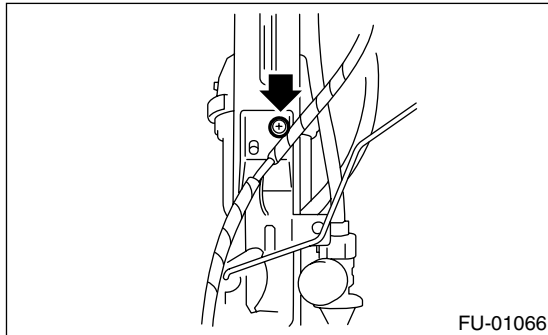

NOTE:

Fuel temperature sensor is a unit with the fuel pump. If replacing it, replace as a fuel pump.

B: INSTALLATION

Install in the reverse order of removal.