

FUEL SUB LEVEL SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

8. Fuel Sub Level Sensor

A: REMOVAL

For work procedures, refer to FU(STi) section.
<Ref. to FU(STi)-58, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For work procedures, refer to FU(STi) section.
<Ref. to FU(STi)-59, INSTALLATION, Fuel Sub Level Sensor.>