


PRESSURE CONTROL SOLENOID VALVE

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

11. Pressure Control Solenoid Valve


A: REMOVAL

1) Disconnect the ground terminal from battery.

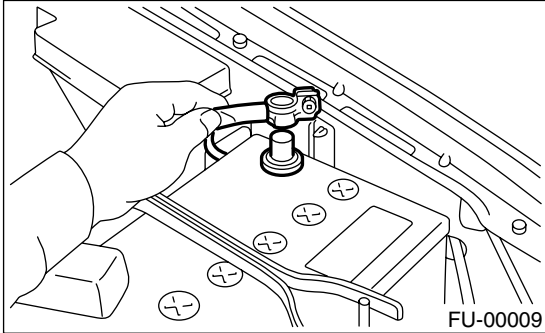


2) Remove the canister. <Ref. to EC(STi)-5, REMOVAL, Canister.>


3) Disconnect the evaporation hoses (A) from joint pipes.

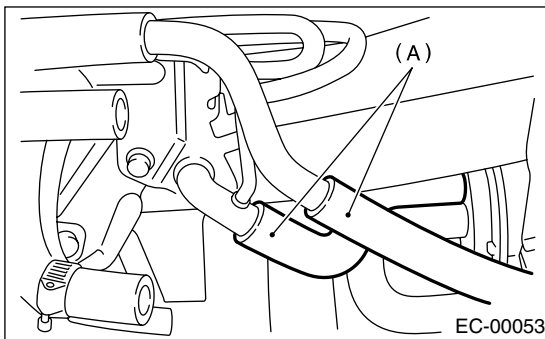

4) Remove the bolt which installs pressure control solenoid valve holding bracket on body.

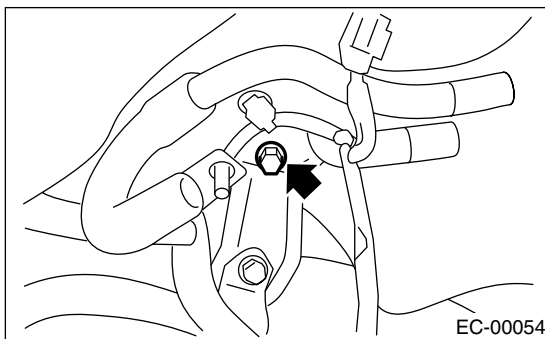


5) Disconnect the connector from pressure control solenoid valve.

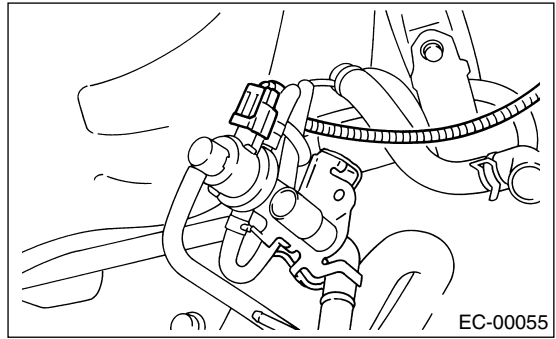


6) Disconnect the two evaporation hoses from pressure control solenoid valve.


7) Remove the pressure control solenoid valve with bracket.

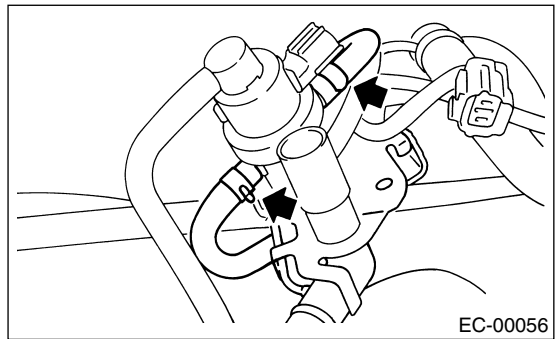

8) Remove the pressure control solenoid valve from bracket.

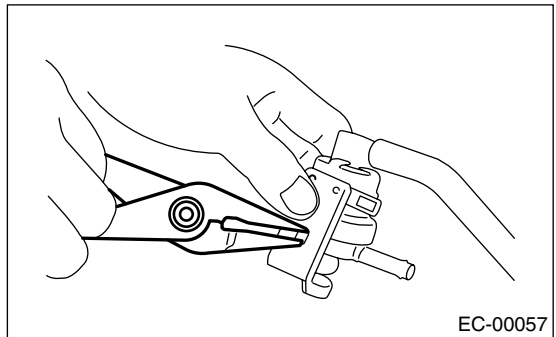

9) Disconnect the vacuum hose from pressure control solenoid valve.

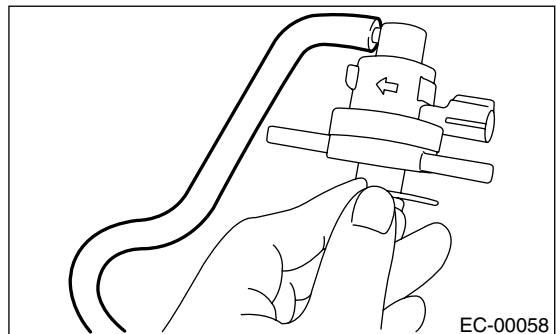

PRESSURE CONTROL SOLENOID VALVE


EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

17.6 N·m (1.8 kgf-m, 13.0 ft-lb)

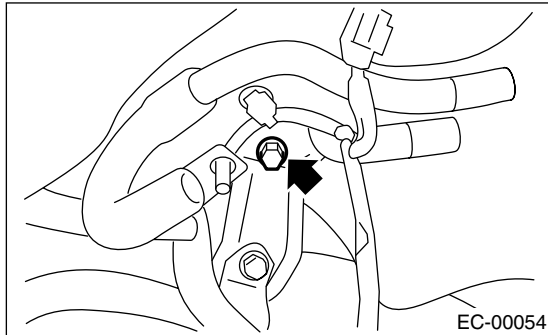

C: INSPECTION

Make sure the hoses are not cracked or loose.