

# PCV HOSE ASSEMBLY

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---


## 16.PCV Hose Assembly

### A: REMOVAL

#### CAUTION:

Removal is not allowed except for the damage of PCV hose, diagnosis connector and PCV valve.

- 1) Remove the intake manifold.  
<Ref. to FU(STi)-14, REMOVAL, Intake Manifold.>
- 2) Remove the clamp using pliers, etc. and then remove the PCV hose assembly.

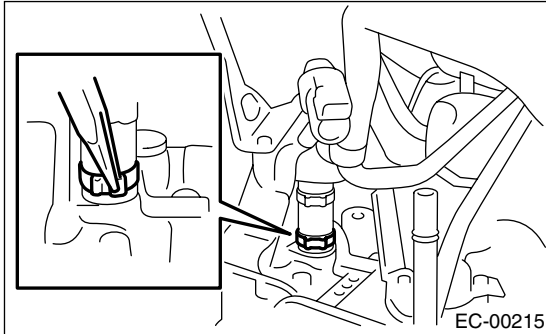


### B: INSTALLATION

#### NOTE:

Replace the clamp with a new one.

- 1) Install the PCV hose assembly and lock it with a clamp clipped by pliers.

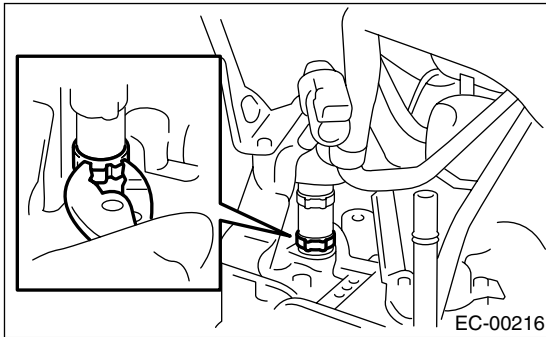

- 2) Install the intake manifold.  
<Ref. to FU(STi)-16, INSTALLATION, Intake Manifold.>