

23.Connecting Rod

A: REMOVAL AND INSTALLATION

For operations related to connecting rod, refer to "20. Cylinder Block." <Ref. to ME(STi)-70, REMOVAL, Cylinder Block.> and <Ref. to ME(STi)-74, INSTALLATION, Cylinder Block.>