## 24.Crankshaft

## **A: REMOVAL AND INSTALLATION**

For operations related to crankshaft, refer to "20. Cylinder Block." <Ref. to ME(STi)-70, REMOVAL, Cylinder Block.> and <Ref. to ME(STi)-74, IN-STALLATION, Cylinder Block.>