

## 14.Rear Vehicle Speed Sensor

### **A: REMOVAL**

When removing the rear vehicle speed sensor, refer to “Front Vehicle Speed Sensor.” <Ref. to 4AT-49, REMOVAL, Front Vehicle Speed Sensor.>

### **B: INSTALLATION**

When installing the rear vehicle speed sensor, refer to “Front Vehicle Speed Sensor.” <Ref. to 4AT-50, INSTALLATION, Front Vehicle Speed Sensor.>