

DROPPING RESISTOR

AUTOMATIC TRANSMISSION


21. Dropping Resistor

A: REMOVAL


NOTE:

Dropping resistor is installed on non-turbo models only.

- 1) Disconnect the ground cable from battery.

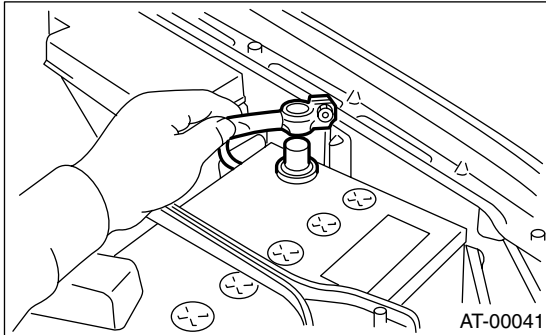

- 2) Remove the air intake duct. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
- 3) Disconnect the connector from dropping resistor.
- 4) Remove the dropping resistor.

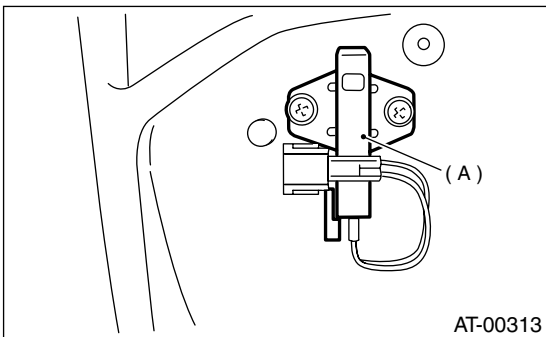

(A) Dropping resistor

C: INSPECTION


Step	Check	Yes	No
1 CHECK RESISTOR. 1) Turn ignition switch to OFF. 2) Disconnect the connector from dropping resistor. 3) Measure the resistance between dropping resistor terminals. Terminals No. 1 — No. 2:	Is the resistance 9 — 15 Ω?	Go to step 2.	Replace the dropping resistor. <Ref. to 4AT-68, Dropping Resistor.>
2 CHECK RESISTOR. Measure the resistance between dropping resistor terminals. Terminals No. 3 — No. 4:	Is the resistance 9 — 15 Ω?	Dropping resistor is normal.	Replace the dropping resistor. <Ref. to 4AT-68, Dropping Resistor.>

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft·lb)

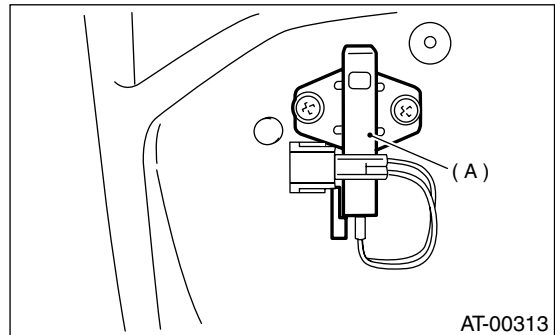

(A) Dropping resistor