


AIR BREATHER HOSE

MANUAL TRANSMISSION AND DIFFERENTIAL

8. Air Breather Hose


A: REMOVAL

Disconnect the air breather hose.

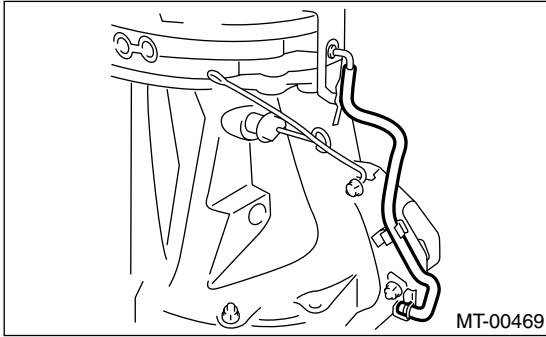

B: INSTALLATION

Install the air breather hose.

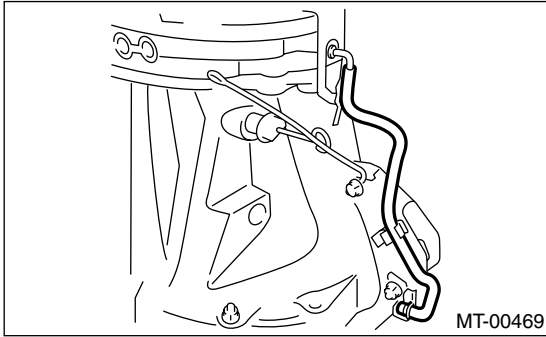

C: INSPECTION

Make sure the hose is not cracked or clogged.