



9. Front Support Arm

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Lift-up the vehicle.
- 3) Remove the under cover.
- 4) Remove the four bolts and jack-up plate.

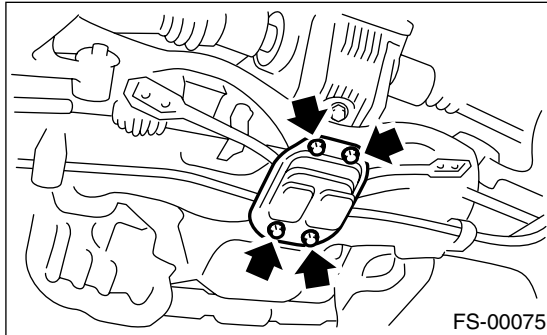

- 5) Remove the two nuts at both ends of arm respectively.

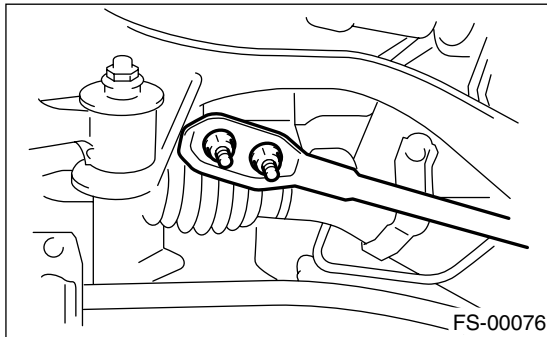

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Front support arm to crossmember:

30 N·m (3.1 kgf-m, 22 ft-lb)

Jack-up plate to crossmember:

70 N·m (7.1 kgf-m, 52 ft-lb)

C: INSPECTION

Check the front support arm for wear, damage and cracks, and correct or replace if defective.