


## POWER TRANSISTOR (AUTO A/C MODEL)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 8. Power Transistor (Auto A/C Model)

#### A: REMOVAL

- 1) Remove the glove box. <Ref. to EI-40, REMOVAL, Glove Box.>
- 2) Disconnect the power transistor connector.
- 3) Loosen the two screws to remove the power transistor.

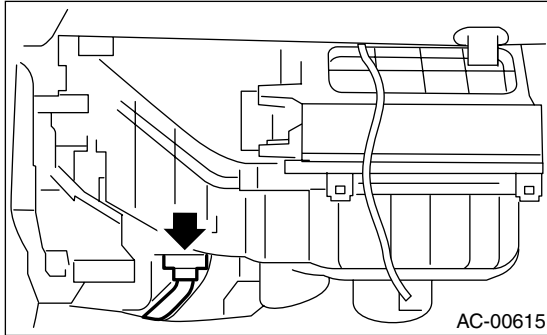

#### B: INSTALLATION

Install in the reverse order of removal.