

## AMBIENT SENSOR (AUTO A/C MODEL)


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

---

### 20. Ambient Sensor (Auto A/C Model)

#### A: REMOVAL

- 1) Open the hood.
- 2) Disconnect the ground cable from battery.
- 3) Disconnect the ambient sensor connector.
- 4) Remove the ambient sensor from radiator lower panel.

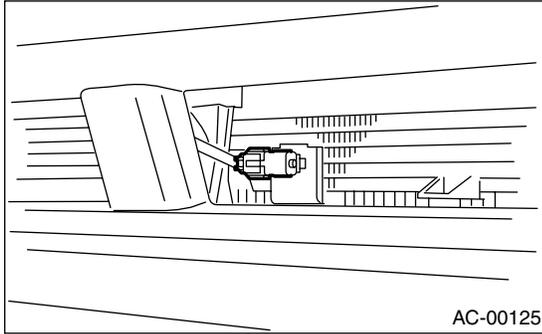

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

<Ref. to AC-25, AMBIENT SENSOR, Diagnostic Procedure for Sensors.>