



10. Front Sub Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
- 3) Remove the front bumper. <Ref. to EI-23, REMOVAL, Front Bumper.>
- 4) Loosen the two bolts to remove the sensor cover.

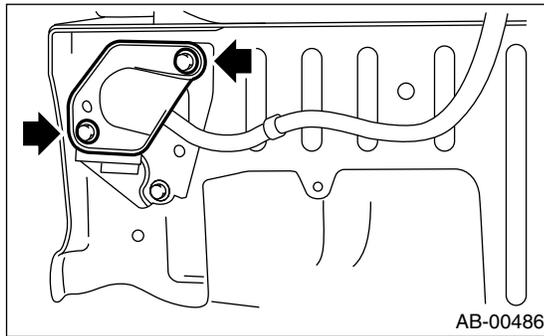

- 5) Remove the bolt, and then detach the front sub sensor.
- 6) Disconnect the connector from front sub sensor.

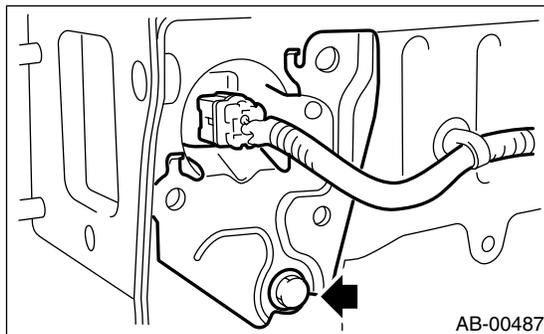

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" in "General Description" <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

C: INSPECTION

Check for the following, and replace damaged parts with new parts.

- Front sub sensor, mounting bracket, and connector are damaged.
- Airbag is deployed.

FRONT SUB SENSOR

AIRBAG SYSTEM
