
## 10.Clear Memory Mode

## A: OPERATION

- 1) Turn the ignition switch to ON.
- 2) Connect the ground terminal (ground terminal "A") to diagnosis connector terminal No. 1 in the instrument panel lower cover area.

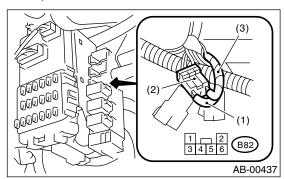

- (1) Diagnosis connector
- (2) Ground terminal "B"
- (3) Ground terminal "A"
- 3) While the warning light flashes, connect another diagnosis terminal (ground terminal "B") to diagnosis connector terminal No. 2.
- 4) Once the memory is erased, the warning light returns to the normal flash rate (0.6 sec on). The failure to recover the normal flash rate indicates that trouble parts still remain. Having repaired such parts, erase the memory again and confirm that the normal flash rate has returned.
- 5) When the memory has been cleared, disconnect the ground terminal from the diagnosis connector.
- 6) Wind tape around the ground terminal and return it to its original position.