


4. Wiper Blade

A: REMOVAL

While pushing the locking clip (A) up, pull out the blade from arm to arrow direction.

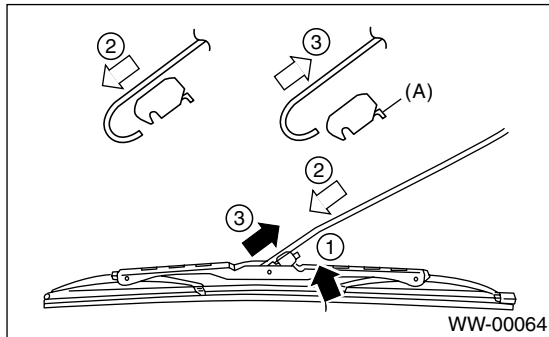


B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Confirm that the clip is locked securely.

C: DISASSEMBLY


1. METAL TYPE

Pull on the side (A) of wiper rubber stopper, and then remove the rubber from blade assembly.

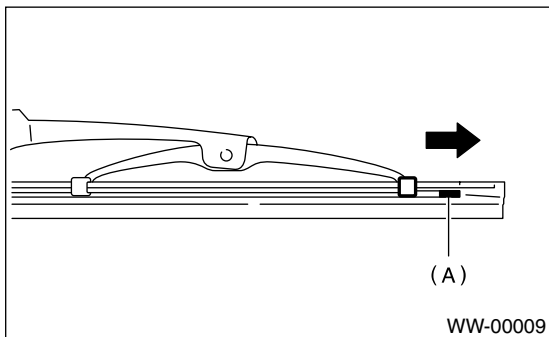

2. RESIN TYPE


Pull the wiper rubber top slightly from the stopper (A) and pull it out fully.

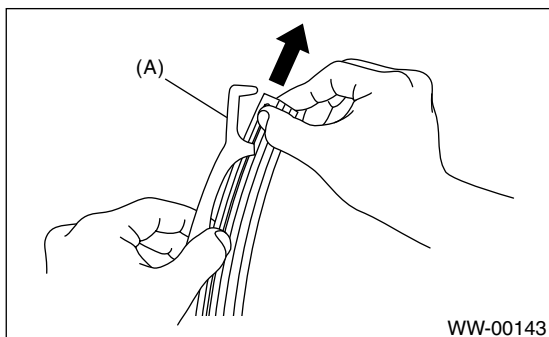


D: ASSEMBLY

1. METAL TYPE

- 1) Insert the wiper rubber onto blade so that the stopper is in the position shown.

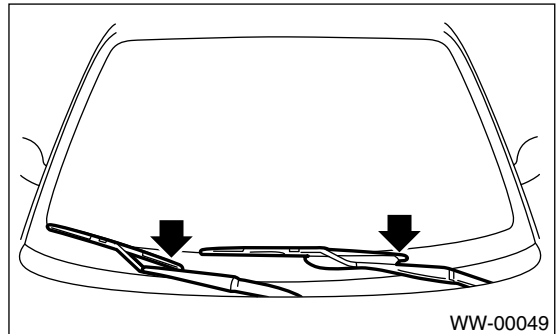


- 2) Make sure the wiper rubber is securely fastened to the pull stopper (A).

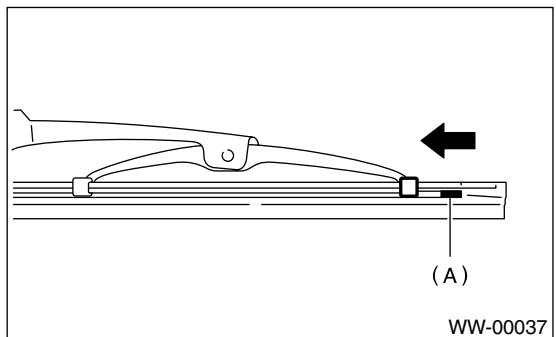


WIPER BLADE

WIPER AND WASHER SYSTEMS


2. RESIN TYPE

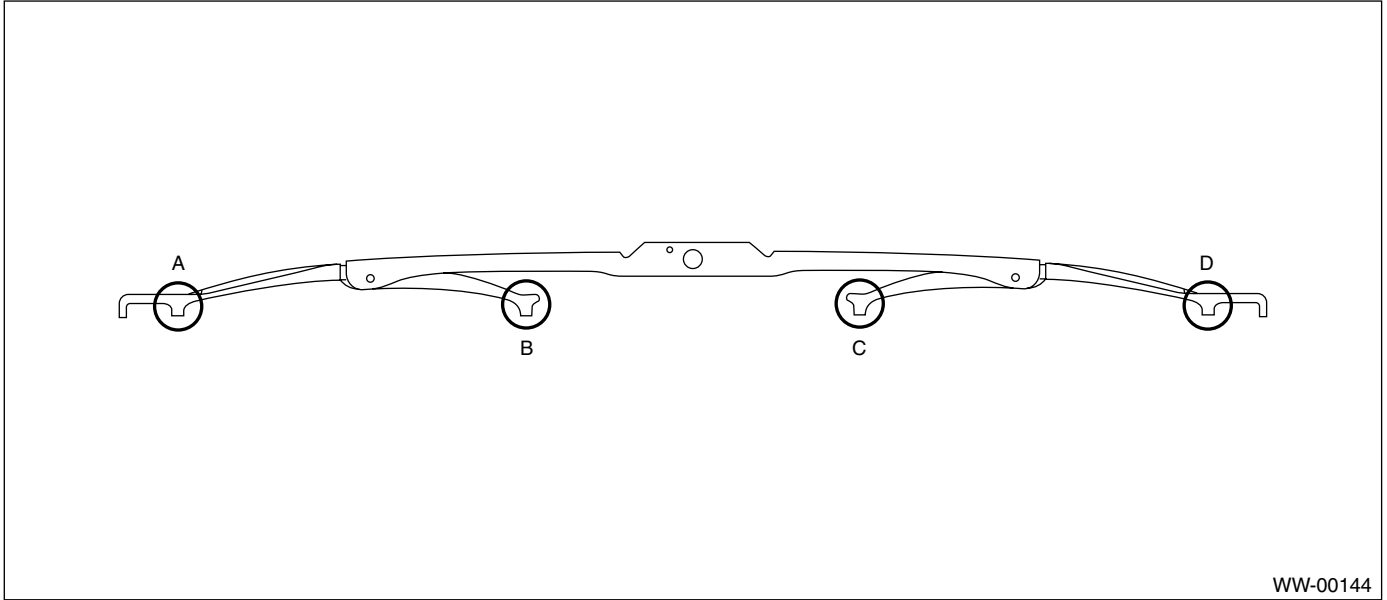


1) Insert the wiper rubber through the claw (B).

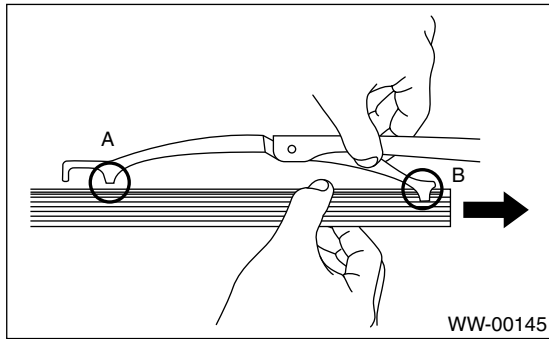

3) Insert the wiper rubber into the claw (A).

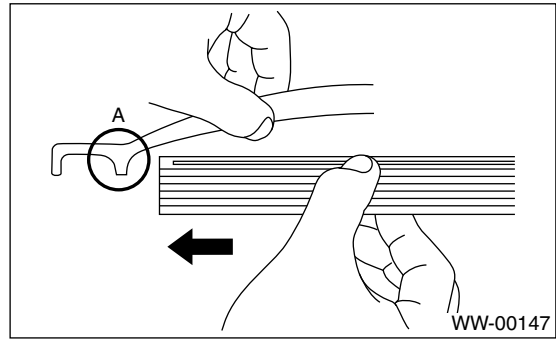

2) Insert the wiper rubber top until it protrudes about 20 mm (0.79 in) from the stopper (D).

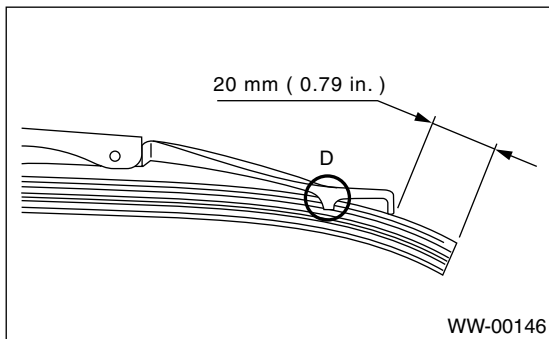

E: INSPECTION

1) When the wiper does not perform well, inspect the following:

- Make sure the movable part of the blade assembly moves smoothly.
- Make sure the wiper rubber is not deformed or damaged.

2) Replace them with new parts if damaged.