


9. Rear Wiper Arm


A: REMOVAL

- 1) Raise the wiper arm cover (A).
- 2) Loosen the nut to remove wiper arm.

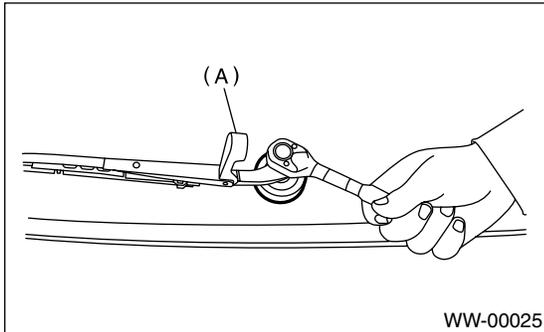

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade to rear defogger heat wire (A).

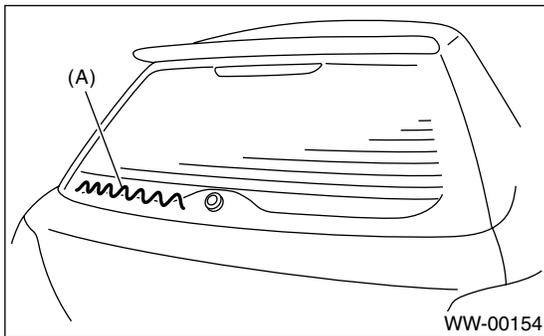

Tightening torque:

Refer to **COMPONENT** in *General Description*.

<Ref. to WW-3, **REAR WIPER, COMPONENT**, *General Description*.>

C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade to rear defogger heat wire (A).

