

# POWER WINDOW CONTROL SWITCH


GLASS/WINDOWS/MIRRORS

## 3. Power Window Control Switch

### A: REMOVAL


#### 1. MAIN SWITCH

- 1) Disconnect the ground cable from battery.
- 2) Loosen the screw to remove the power window main switch.
- 3) Disconnect the connector.

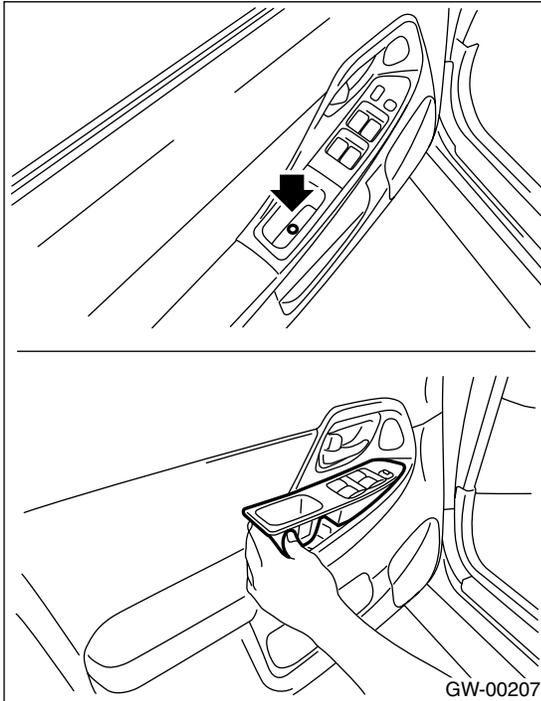

#### 2. SUB-SWITCH

- 1) Disconnect the ground cable from battery.
- 2) Remove the switch panel.
- 3) Disconnect the connector.

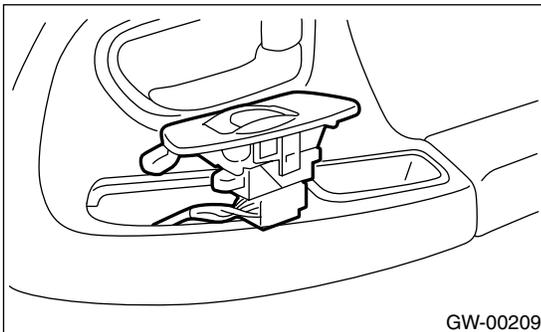

### B: INSTALLATION

#### 1. MAIN SWITCH

Install in the reverse order of removal.

#### 2. SUB-SWITCH

Install in the reverse order of removal.

# POWER WINDOW CONTROL SWITCH

GLASS/WINDOWS/MIRRORS

## C: INSPECTION

### 1. MAIN SWITCH

Measure the switch resistance.

	Switch position	Terminal No.	Standard
Driver's side	AUTO UP	13 and 2, 1 and 5	Less than 1 $\Omega$
	UP	13 and 2, 1 and 5	Less than 1 $\Omega$
	OFF	1 and 2 1 and 5 2 and 5	Less than 1 $\Omega$
	DOWN	13 and 1, 2 and 5	Less than 1 $\Omega$
	AUTO DOWN	13 and 1, 2 and 5	Less than 1 $\Omega$
Front passenger's side	UP	13 and 7, 6 and 5	Less than 1 $\Omega$
	OFF	5 and 6 5 and 7 6 and 7	Less than 1 $\Omega$
	DOWN	13 and 6, 7 and 5	Less than 1 $\Omega$
Rear LH	UP	10 and 13, 9 and 5	Less than 1 $\Omega$
	OFF	5 and 11 5 and 10 11 and 10	Less than 1 $\Omega$
	DOWN	13 and 11, 10 and 5	Less than 1 $\Omega$
Rear RH	UP	13 and 16, 15 and 5	Less than 1 $\Omega$
	OFF	5 and 15 5 and 16 15 and 16	Less than 1 $\Omega$
	DOWN	13 and 15, 16 and 5	Less than 1 $\Omega$

If NG, replace the main switch.

### 2. SUB-SWITCH

Measure the switch resistance.

	Switch position	Terminal No.	Standard
Front passenger's side & rear	UP	8 and 5, 6 and 7	Less than 1 $\Omega$
	OFF	4 and 5, 6 and 7	Less than 1 $\Omega$
	DOWN	8 and 7, 4 and 5	Less than 1 $\Omega$

If NG, replace the sub-switch.