


### 9. Rear Inner Remote

#### A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-39, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Rear Sealing Cover.>
- 3) Remove a screw and two rod joints.
- 4) Remove the inner remote.

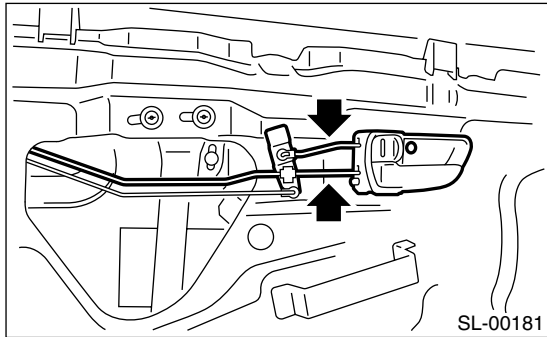

#### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the inner remote works properly after installation.

#### C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.
- 3) Make sure the child safety lock work properly.