

## 17. Trunk Lid Release Handle

## A: REMOVAL

1) Remove the five clips.

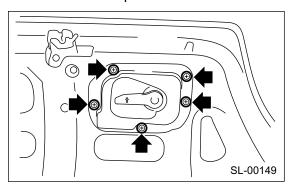

2) Remove the cable from trunk lid release handle.

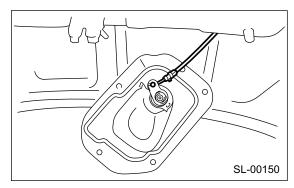

## **B: INSTALLATION**

Install in the reverse order of removal.

## **C: INSPECTION**

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever works smoothly.