


26. Keyless Entry Control Module

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-44, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the nut, and then remove the keyless entry control module while disconnecting connector.

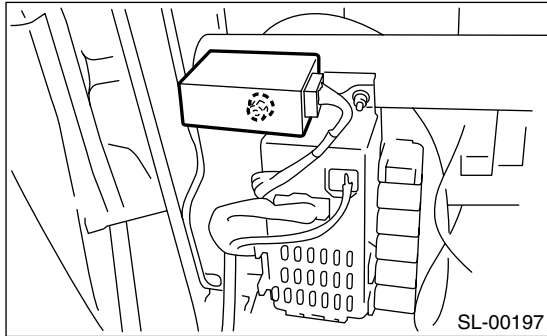

- 4) Disconnect the keyless entry control module and other electrical control module.

B: INSTALLATION

Install in the reverse order of removal.