


7. Mud Guard

A: REMOVAL

- 1) Jack-up the vehicle.
- 2) Remove the screws and clips to remove mud guard.

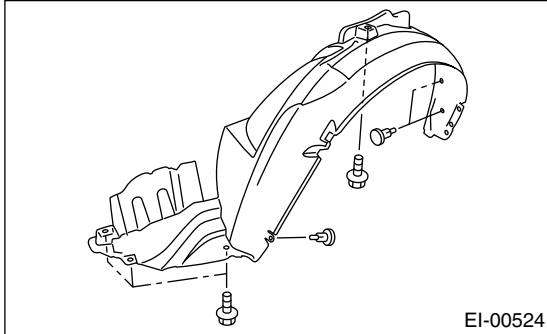

B: INSTALLATION

Insert the hook into body, and tighten it with screw and clip.

Tightening torque:

14 N·m (1.42 kgf-m, 10.3 ft-lb)