


## 9. Roof Spoiler

### A: REMOVAL

- 1) Remove the bolt cap, and then remove the two bolts.
- 2) Remove the roof spoiler.

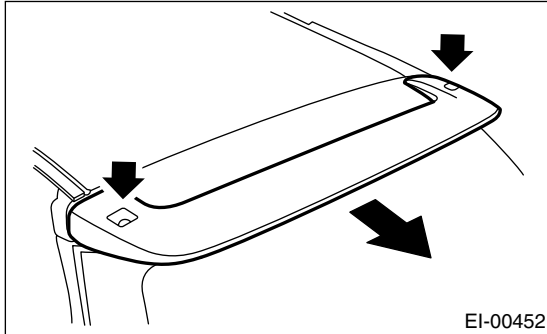

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

*7.4 N·m (0.75 kgf-m, 5.46 ft-lb)*