


27.Trunk Trim

A: REMOVAL

- 1) Remove the rear seat backrest. <Ref. to SE-16, SEDAN MODEL, REMOVAL, Rear Seat.>
- 2) Remove the clip (A).
- 3) Loosen the clips, and then detach the trunk rear trim (B).
- 4) Loosen the clips to remove the trunk side trim (C).

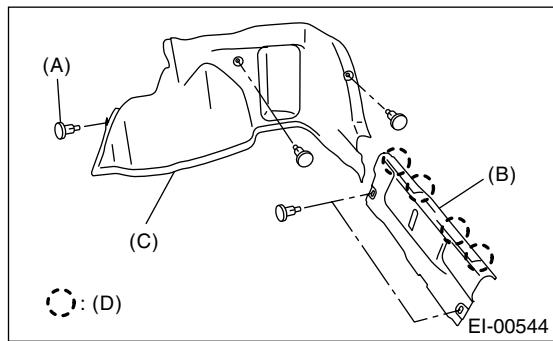

(D) Clip

B: INSTALLATION

Install in the reverse order of removal.