

## 6. Neutral Position Switch

### A: REMOVAL

<Ref. to 6MT-45, REMOVAL, Neutral Position Switch.>

### B: INSTALLATION

<Ref. to 6MT-45, INSTALLATION, Neutral Position Switch.>

### C: INSPECTION

<Ref. to 6MT-46, INSPECTION, Neutral Position Switch.>

# NEUTRAL POSITION SWITCH

CRUISE CONTROL SYSTEM

---