

BATTERY

STARTING/CHARGING

3. Battery

The battery is located in the left front part of the engine compartment. It is held on a tray by the battery holder.

SC(H4SO)-5

BATTERY

STARTING/CHARGING

MEMO

SC(H4SO)-6